


SOA-1190-90-YY-20dB

Broad-band Semiconductor Optical Amplifier

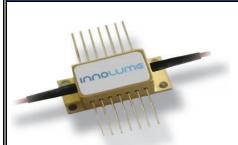

Features:

- Broad band (1150-1240nm) gain up to 20dB
- Ultra low ripples 0.02dB (RMS)
- · Based on InAs/GaAs quantum dot chip
- Strong linear polarization
- RoHS compliance

Applications:

- Swept-source, tunable lasers
- · Booster optical amplifiers
- · Optical preamplifiers

SPECIFICATIONS Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink						
Parameters	Min.	Тур.	Max.	Unit		
Operating current (lop)		300	400	mA		
Forward voltage @ lop		1.4	1.6	V		
Gain						
Small signal gain ^{1 2}	16	20		dB		
Gain mean wavelength¹	1180	1190	1200	nm		
Gain bandwidth¹ @ -3dB	75	90		nm		
Amplitude of gain spectrum dip¹		5	7	dB		
Gain saturation output power ² @ -3dB	10	15		dBm		
Noise figure ³ ***		6.5		dB		
Amplified Spontaneous Emission (ASE)*						
ASE optical power ex fiber from each port	0.4	0.7		mW		
ASE mean wavelength	1180	1190	1200	nm		
ASE bandwidth @ -3dB	75	90		nm		
Amplitude of ASE spectrum dip		5	10	dB		
ASE ground state maximum position	1215	1225	1235	nm		
ASE excited state maximum position	1150	1160	1170	nm		
ASE** spectrum ripples³ (RMS in 1nm range, 10pm resolution)		0.02	0.1	dB		
ASE rise time		0.5		ns		
ASE fall time		0.5		ns		
ASE polarization extinction ratio (PER) at each port	15	20		dB		

¹ at -25dBm input optical power

^{***} NF=10log₁₀(2p_{ASE}/Ghv) [D.Baney *et al.*, Optical Fiber Techn. **6**, 122 (2000)]


ABSOLUTE MAXIMUM RATINGS					
Parameters	Min.	Max.	Unit		
SOA reverse voltage	-	2	V		
SOA CW forward current	-	1200	mA		
Input optical power	-	20	dBm		
Thermo Electric Cooler current	-	3	Α		
Thermo Electric Cooler voltage	-	4	V		
Fiber bend radius	3	-	cm		
Chip operating temperature range	10	40	°C		
Case operating temperature range	0	70	°C		
Storage temperature range	-40	85	°C		

^{*} without input light

² at wavelength of gain maximum

^{**} from output port



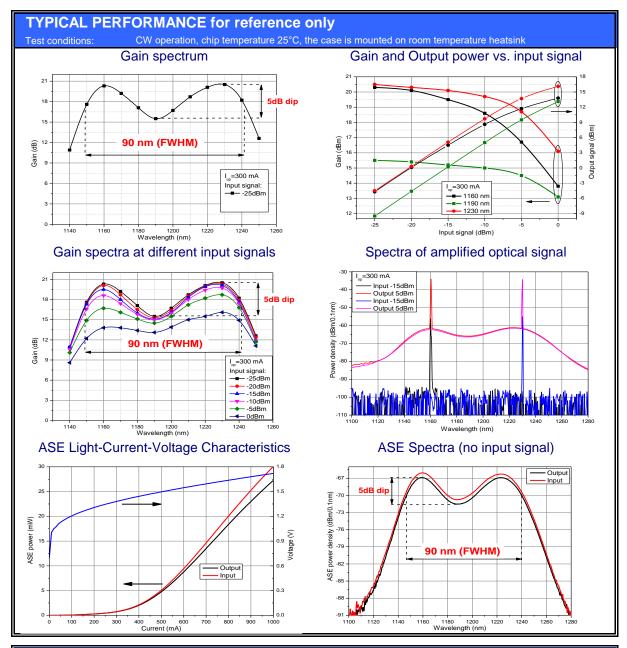

Part Number Identification


YY: Optical fiber type PM – PM980 fiber HI – HI1060 fiber

Example: SOA-1190-90-PM-20dB


NOTE: Innolume product specifications are subject to change without notice



Konrad-Adenauer-Allee 11, 44263 Dortmund/Germany Phone: +49 231 47730 200; Web: www.innolume.com

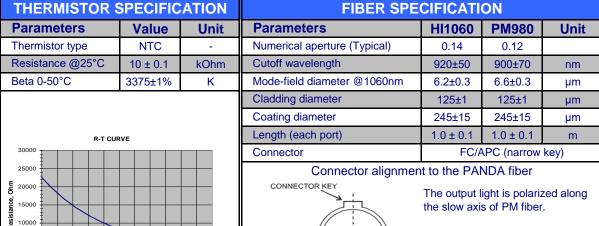

FAST

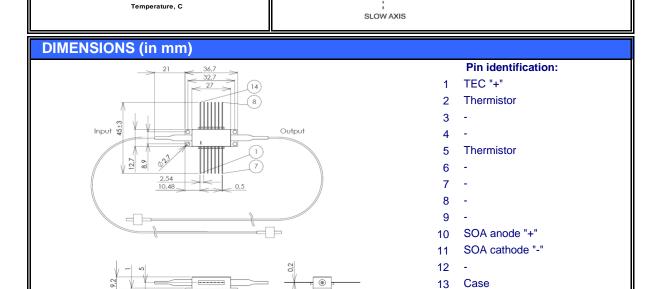

AND OPERATING INSTRUCTIONS

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector.

Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this.

Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.



5000

15 20







TEC "-"