


## SM-9XX-YY-150\_200\_250

Fiber Coupled High Power Fabry-Pérot Laser Diode

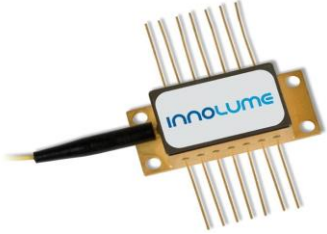


**Features:**

- 150 / 200 / 250mW output power ex-single mode fiber
- Available wavelength range 900-1010nm
- PM980 or HI1060 fiber
- Individual burn-in and thermal cycling screening
- Optional monitor photodiode
- RoHS compliance

AVAILABLE POWER OPTIONS						
Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink						
Part Number	Output power (mW) Pout	Operating current (mA)		Forward voltage (V)		
		Typ.	Max.	Typ.	Max.	
SM-9XX-YY-150	150	300	370	1.6	1.8	
SM-9XX-YY-200	200	350	420	1.6	1.8	
SM-9XX-YY-250	250	400	470	1.6	1.8	

SPECIFICATIONS						
Test conditions: CW operation, chip temperature 25°C, the case is mounted on room temperature heatsink						
Parameters	Symb.	Min.	Typ.	Max.	Unit	
Kink-free* output power		1.1×Pout	1.3×Pout		mW	
Range of available wavelength	$\lambda$	900		1010	nm	
Mean wavelength tolerance				5	nm	
Spectral width @ -3dB level at Pout	$\Delta\lambda$		<0.5	4	nm	
Threshold current	I <sub>th</sub>		70	100	mA	
Wavelength temperature tunability	$\Delta\lambda/\Delta T$	0.3		0.4	nm/°C	
Polarization Extinction Ratio	PER	12			dB	

\*  $\Delta P/\Delta I > 0$  ( $\Delta I=5mA$ )

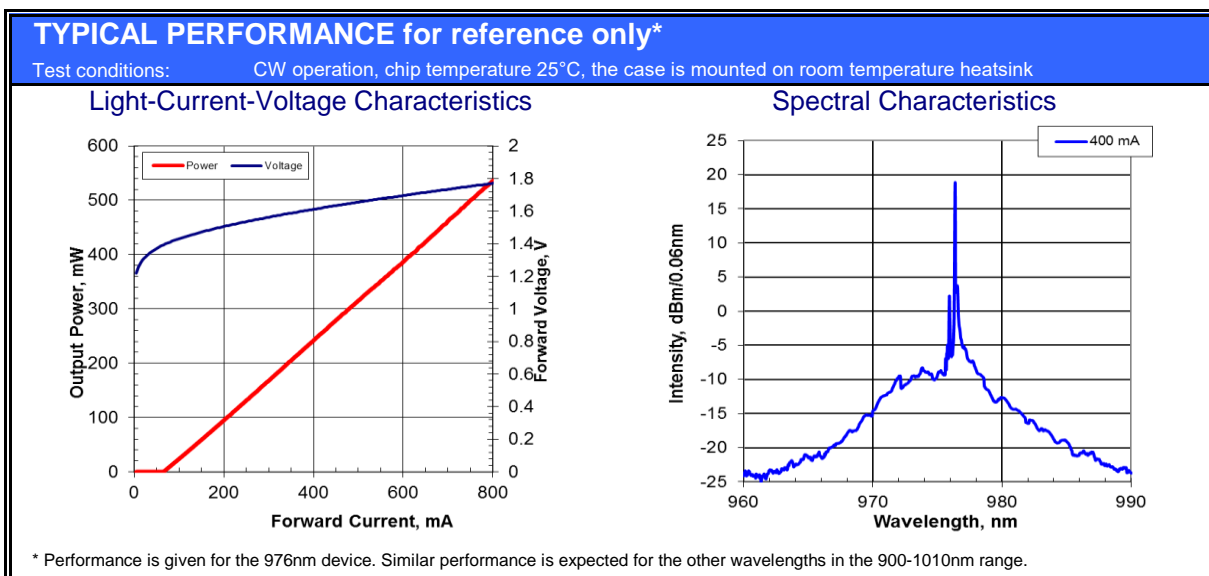

ABSOLUTE MAXIMUM RATINGS			
Parameters	Min.	Max.	Unit
Laser Diode reverse voltage	-	2	V
Laser Diode CW forward current	-	lop+300	mA
Thermo Electric Cooler current	-	3	A
Thermo Electric Cooler voltage	-	4	V
Fiber bend radius	3	-	cm
Chip operating temperature range	5	40	°C
Case operating temperature range	0	70	°C
Storage temperature range	-40	85	°C

THERMISTOR SPECIFICATION			FIBER SPECIFICATION			
Parameters	Value	Unit	Parameters	HI1060	PM980	Unit
Thermistor type	NTC	-	Numerical aperture (Typical)	0.14	0.12	
Resistance @25°C	10 ± 0.1	kOhm	Cutoff wavelength	920±50	900±70	nm
Beta 0-50°C	3375±1%	K	Mode-field diameter (@1060nm)	6.2±0.3	6.6±0.3	µm
			Cladding diameter	125±1	125±1	µm
			Coating diameter	245±15	245±15	µm
			Length	1.0 ± 0.1	1.0 ± 0.1	m
			Connector	FC/APC (narrow key)		
			<p>Connector alignment to the PANDA fiber</p>			
			<p>The output light is polarized along the slow axis of PM fiber.</p>			

DIMENSIONS (in mm)		Pin identification:
		<ol style="list-style-type: none"> <li>1 TEC "+"</li> <li>2 Thermistor</li> <li>3 Monitor PD anode (optional)</li> <li>4 Monitor PD cathode (optional)</li> <li>5 Thermistor</li> <li>6 -</li> <li>7 -</li> <li>8 -</li> <li>9 -</li> <li>10 Laser Diode anode "+"</li> <li>11 Laser Diode cathode "-"</li> <li>12 -</li> <li>13 Case</li> <li>14 TEC "-"</li> </ol>

## SAFETY AND OPERATING INSTRUCTIONS

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector.

Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this.

Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.



## Example of Part Number Identification

SM-990-HI-150 -> 150mW output power at mean wavelength 990nm, HI-1060 fiber  
 SM-980-PM-200 -> 200mW output power at mean wavelength 980nm, PM-980 fiber  
 SM-976-PM-250 -> 250mW output power at mean wavelength 976nm, PM-980 fiber

**NOTE:** Innolume product specifications are subject to change without notice