


DFB-13XX-XX-100-VO

Fiber Coupled Distributed-Feedback Laser Diode with Integrated Isolator

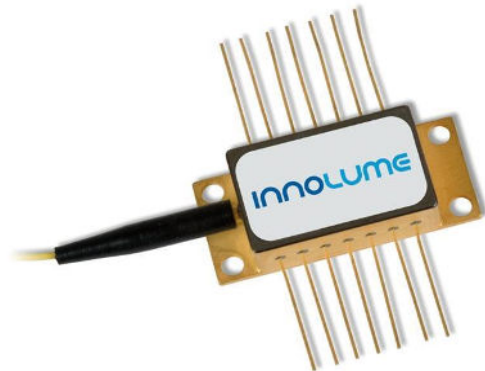

Features:

- High output power > 100mW ex-fiber in 1300-1330nm range
- Integrated free-space optical isolator (double stage)
- Mode-hop free continuous tuning
- Individual burn-in and thermal cycling screening
- Proprietary mirror coating technology enabling high reliability
- Built-in monitor photodiode (optional)
- 900um loose tube on fiber (optional)

Recommended Operating Conditions

@ CW, the case is mounted on room temperature heatsink

Parameter	Min.	Typ.	Max.	Unit
Chip Temperature	20	25*	40	°C
Forward Current		800	850	mA
Output Power**	20		100	mW

* in some cases may vary depending on the selected wavelength

** kink-free over the entire range

Characteristics

@ CW, 25°C*, 800mA


Parameter	Min.	Typ.	Max.	Unit
Output Power @ 850mA	100			mW
Forward Voltage		2.6	3.5	V
Threshold Current		60	100	mA
Peak Wavelength** (chosen by customer)	1300		1330	nm
Peak Wavelength Tolerance			±1	nm
Wavelength Temperature Tunability		120		pm/°C
Wavelength Current Tunability		4		pm/mA
Side-Mode Suppression Ratio (SMSR)	40	50		dB
Linewidth (self-heterodyning @ 80MHz)		0.8	5	MHz
Polarisation Extinction Ratio (PER)	15	18		dB
Polarisation		TE		

* in some cases may vary in 20-40°C range depending on the selected wavelength


** reachable within wavelength tolerance at power > 100mW

Typical Performance (for reference only)


Light Current Voltage Characteristics

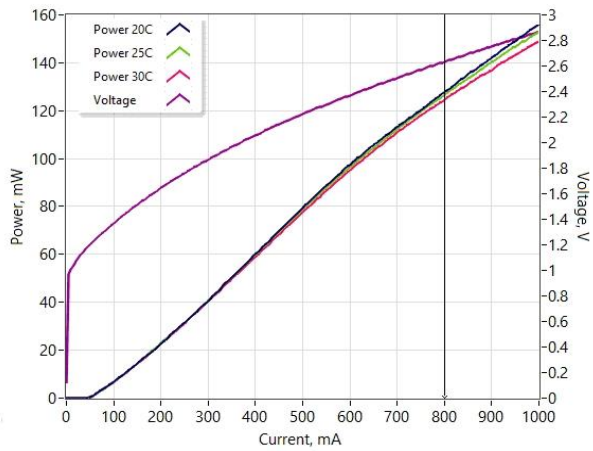


Optical Spectra vs Temperature (res. 10pm)

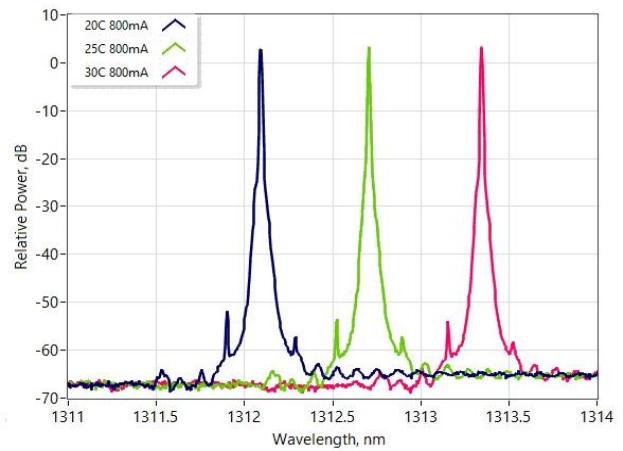

Peak Wavelength Tuning by Current

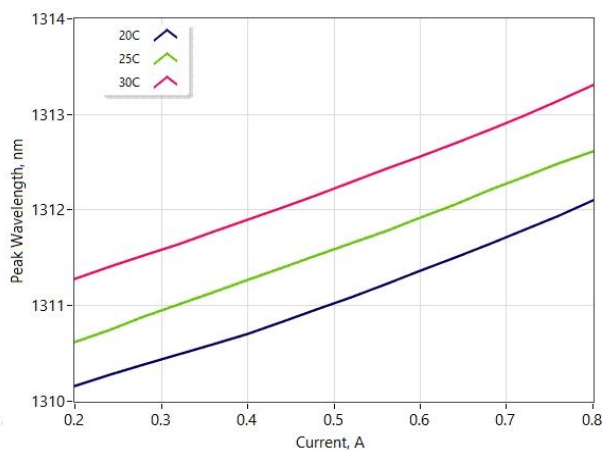



RF-line Spectrum

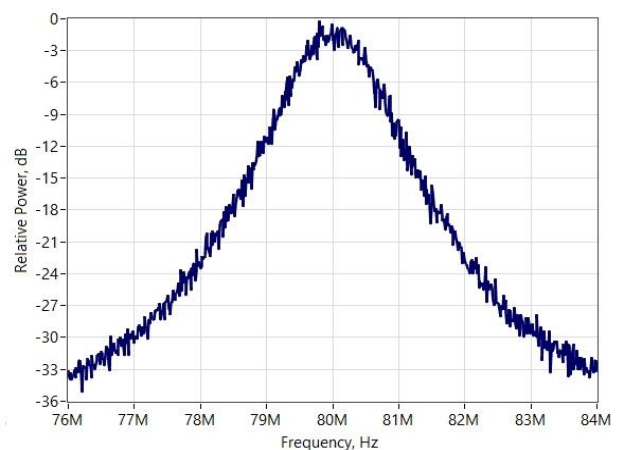

Absolute Maximum Ratings


Parameter	Min	Max	Unit
Forward Current		1000	mA
Reverse Voltage		2	V
TEC Current		3	A
TEC Voltage		4	V
Chip Operating Temperature	5	50	°C
Case Operating Temperature	0	70	°C
Storage Temperature	-40	85	°C
Fiber Band Radius	3		cm

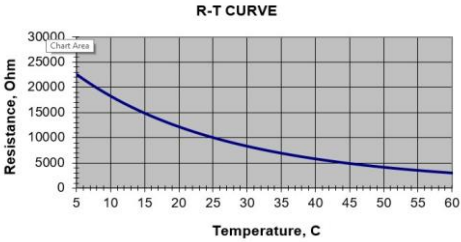Thermistor specification			Fiber specification			
Parameters	Value	Unit	Parameters	Value	Value	Unit
Type	NTC		Fiber Type	HI1060	PM1300	
Resistance @ 25°C	10±0.1	kOhm	Numerical Aperture (Typical)	0.14	0.12	
Beta 0-50°C	3430±1%	K	Cut-off Wavelength	920±50	1200±70	nm
			Mode-Field Diameter	6.2±0.3 @1060nm	9.3±0.5 @1300nm	μm
			Cladding Diameter	125±1	125±1	μm
			Coating Diameter	245±15	245±15	μm
			Loose Tube Diameter (optional)	900	900	μm
			Connector	FC/APC	FC/APC	
			Key	narrow	narrow	

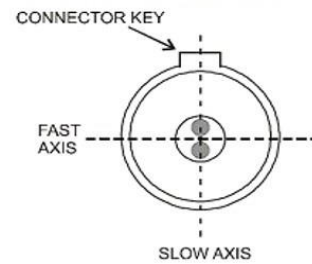

The output light is polarized along the slow axis of PM fiber.

Dimensions (in mm)

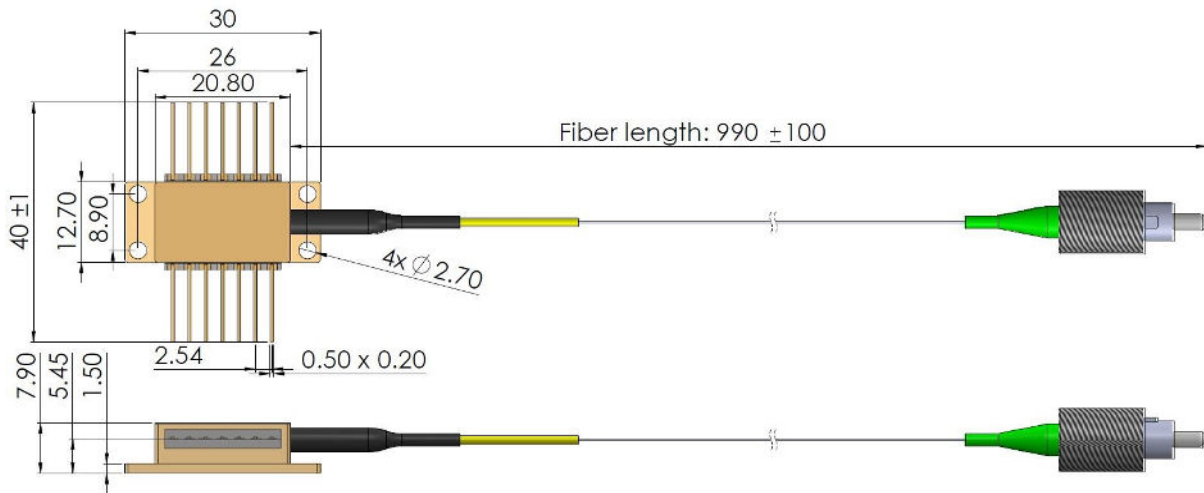

#	Pin identification	#	Pin identification
1	TEC "+"	8	-
2	Thermistor	9	-
3	Photodiode "+"	10	Laser Diode "+"
4	Photodiode "-"	11	Laser Diode "-"
5	Thermistor	12	-
6	-	13	Case
7	-	14	TEC "-"

Safety and Operating Instructions


The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector. Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this.

Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.

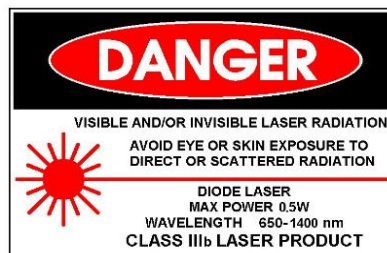

Part-number Identification

DFB-1310-HI-100-VO -> 100mW output power at 1310nm peak wavelength, HI-1060 fiber
DFB-1312-PM-100-VO-PD-LT -> 100mW output power at 1312nm peak wavelength, PM-1300 fiber, with built-in monitor photodiode and fiber loose tube

NOTE: Innolume product specifications are subject to change without notice

Revision history		
Rev	Date	Description
01	25 Jan 2023	Initial issue of the document